



## INSTRUCTIONS FOR USE


# SM feeder

### ONE FEEDER – MANY POSSIBILITIES!

The SM feeder have a wide range of feed flow adjustments, which makes it possible to use the feeder for many types of feed - from flour feed to various pellets.


It is necessary to set individually the adjustment range to the feed used on the farm.

#### ADJUSTMENT RANGE FOR FLOUR FEED

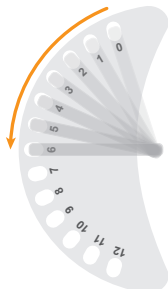

| When using flour feed in the SM feeder, we recommend to use the initial adjustment range from 0 to 6.

#### ADJUSTMENT RANGE FOR PELLET FEED

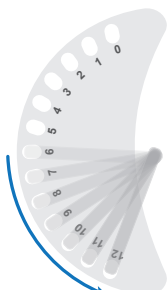

| When using pellet feed in the SM feeder, we recommend to use a higher adjustment range from 6 to 12.



- | When setting the adjustment range on your feeder, make sure which range is right for the feed you use.
- | The adjustment setting is correct when there is no spontaneous spillage of feed from the feeder.